

55054003 EN ROUTE RADAR ASSOCIATE CONTROLLER TRAINING PART C: ADVANCED CONCEPTS

Lesson 8: Pilot Initiated Downlinks (PIDs)

Version: 1.0 2022.08



LESSON PLAN DATA SHEET

Course Name	En Route Radar Associate Controller Training Part C: Advanced Concepts
Course Number	55054003
Lesson Title	Pilot Initiated Downlinks (PIDs)
Duration	1 hour, 45 minutes (includes lesson, part-task exercise, and ELT)
Version	1.0 2022.08
Reference(s)	JO 7110.65, Air Traffic Control; JO 7110.125, Controller Pilot Data Link Communications (CPDLC) in the ERAM Environment; TI 6110.101, En Route Automation Modernization RA-Position User Manual; TI 6110.108, ERAM Quick Reference Controller Card; ERAM ATCHI MISC 230.05
Prerequisites	NONE
Handout(s)	 Part-Task Exercise TI 6110.108, ERAM Quick Reference Controller Card
Exercise / Activity	Refer to handout for: O Part-Task Exercise: Pilot Initiated Downlinks
Scenario	⊙ Run scenario 55054003_L08_S## in TTL
Assessments	⊙ YES - Written
Materials and Equipment	Pencil and/or pen
Other Pertinent Information	 Ensure lesson materials are downloaded to the classroom computer This lesson is based on ERAM EAE410 The lesson has been reviewed and reflects current orders and manuals as of April 2022


LESSON ICON LEGEND

	Description
Y	The Activity icon indicates an exercise, lab, or hands-on activity.
	The Discussion Question icon signals a discussion question to be asked to the students.
	The Handout icon indicates a handout is to be distributed to the students.
	The Instructor Note icon is in hidden text and indicates text that is for the instructor only.
	The Multimedia icon indicates a video or audio clip is in the presentation.
†	The Phraseology icon indicates that phraseology is in the content.
	The WBT icon indicates a component of web-based training.
[X	The Click icon indicates a PPT slide with click-based functionality to present additional information.
	The Definition icon indicates a published definition.



LESSON INTRODUCTION

Overview

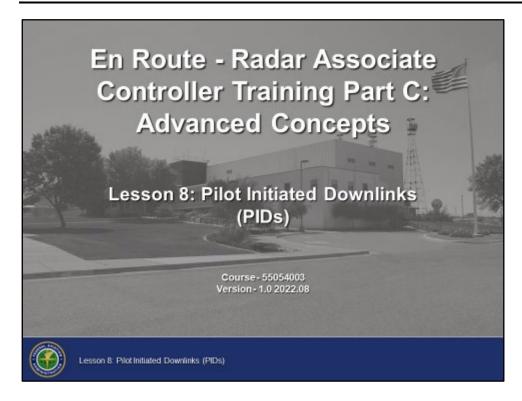

This lesson introduces Pilot Initiated Downlinks (PIDs), which provide an alternative to voice requests and subsequent clearances.

LESSON INTRODUCTION (CONT'D)

Lesson **Objectives**

Lesson Objectives

At the end of this lesson, you will be able to identify characteristics of CPDLC Pilot Initiated Downlinks (PIDs).



Lesson 8: Pilot Initiated Downlinks (PIDs)

At the end of this lesson, you will be able to identify characteristics of CPDLC Pilot Initiated Downlinks (PIDs).

NOTE: There will be a graded end-of-lesson test upon completion of the lesson. The passing score is 70%. If you do not achieve a score of 70%, you will be provided study time and one retake of an alternate end-of-lesson test.

CPDLC PILOT INITIATED DOWNLINK

Pilot Initiated Downlinks (PIDs)

TI 6110.101, sec. 11.2




- CPDLC includes the capability for Pilot Initiated Downlinks (PIDs)
- The two types of PIDs are Normal and Emergency
 - Normal PID
 - Altitude, message received:
 - REQUEST <altitude>
 - REQUEST CLIMB TO <altitude>
 - o REQUEST DESCENT TO <altitude>
 - Route, message received:
 - REQUEST DIRECT TO <POSITION>
 - Voice contact, message received:
 - REQUEST VOICE CONTACT
 - Emergency PID
 - Will be covered in a later lesson

Normal PID Indicator - No Uplinks

TI 6110.101, sec. 11.2


TI 6110.100, sec. 11.2.2

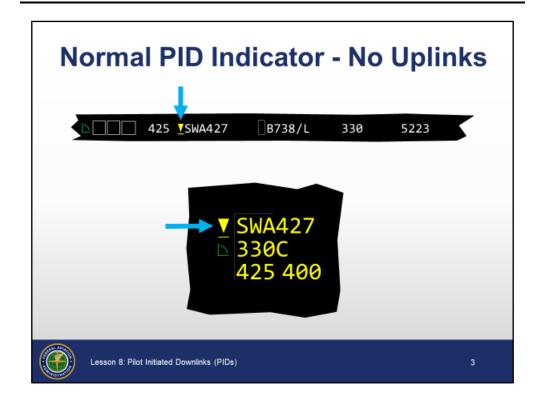

- O Normal PID indicator with no uplinks:
 - Indicates at least one open PID waiting for a response
 - Is a yellow downward pointing triangle with a yellow line underneath
 - Replaces the CDA Session with Eligibility symbol
 - · Is displayed in both the ACL and the FDB

Normal PID Indicator - With Uplinks

TI 6110.101, sec. 11.2

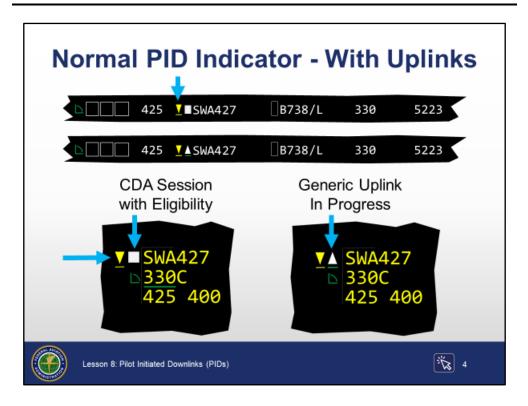

Normal PID indicator with uplinks

- If the Message Out menu (Mini Mo) contains any entries (i.e., uplinks), the PID indicator will be offset to the left of either the CDA session with eligibility symbol or the Generic Uplink indicator
 - PID indicator to the left of the CDA session with eligibility symbol indicates an altitude uplink, route uplink, or both
 - PID indicator to the left of the Generic Uplink indicator indicates an uplink that is not one of the following:
 - Altitude
 - o Route
 - o TOC
 - Confirm Assigned Altitude (CAA)

Examples: Uplink Frequency and Uplink Altimeter

Continued on next page


Normal PID Indicator -With Uplinks (Cont'd)

TI 6110.101, sec. 11.2

• The PID indicator appears on both the ACL and FDB

PID Menu

TI 6110.101, sec. 11.1.1

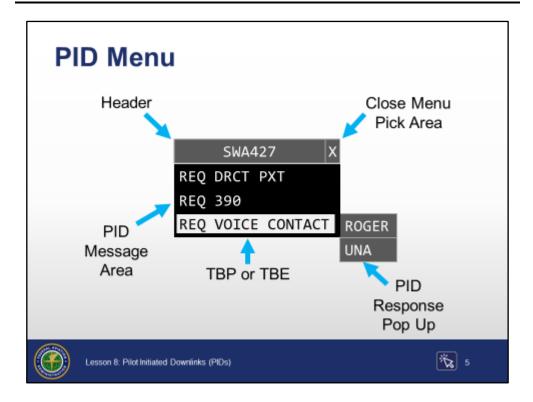

- ⊙ TBP or TBE on the PID Indicator to open the PID menu for that aircraft
 - Appears next to the selected PID on the ACL or Situation Display
- The PID menu consists of the following:
 - Header
 - Close menu pick area
 - PID message area
- The PID message area can include one or more PID requests from the aircraft
 - If there is more than one, TBP or TBE each individual request to respond to it
 - When a PID is selected, it will be highlighted and the available response options displayed in the PID Response pop up
 - Available response options vary based on the PID request type, error conditions, and whether a STANDBY response has been uplinked

Continued on next page


PID Menu (Cont'd)

TI 6110.101, sec. 11.2

- The PID menu will close as a result of any of the following:
 - Select the PID menu close pick area
 - TBP anywhere outside the menu
 - Press the CLEAR key on the keyboard
 - Select a response when there is only one PID request

PID Request - Direct-to-Fix


TI 6110.101, sec. 11.2.1.2

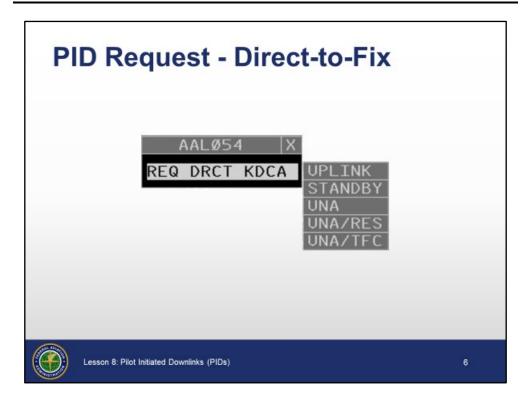

- When the PID menu is opened and there is only one PID request, that request will be automatically selected and all available response options will be presented
- For a Direct-to-Fix request, the possible response options are:
 - UPLINK
 - Results in a PROCEED DIRECT TO route uplink
 - STANDBY
 - Results in a STANDBY uplink
 - The Normal PID indicator will remain displayed on the FDB and ACL
 - UNA
 - Results in an UNABLE uplink
 - UNA/RES
 - Results in an UNABLE DUE TO AIRSPACE RESTRICTION uplink
 - UNA/TFC
 - Results in an UNABLE DUE TO TRAFFIC uplink
- TBP or TBE on the desired option to enter

PID Request -Direct-to-Fix Error


TI 6110.101, sec. 11.4

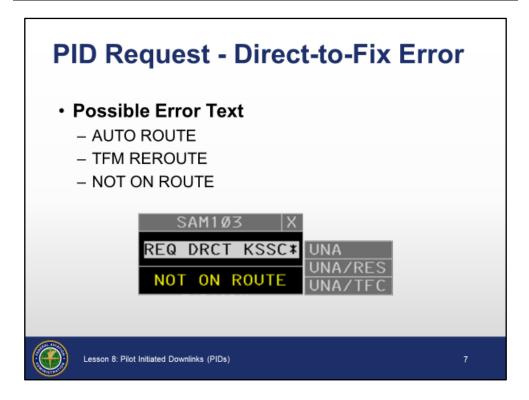

- For Direct-to-Fix requests, the system will determine if there are any errors associated with the requested fix
- Possible error text will be displayed in yellow:
 - AUTO ROUTE
 - Fix is part of or beyond an unacknowledged auto route
 - TFM REROUTE
 - Fix is part of or beyond an unapplied Airborne Reroute (ABRR)
 - NOT ON ROUTE
 - Fix is not on the current cleared route
- If there is an error, the only available response options will be:
 - UNA
 - Results in an UNABLE uplink
 - UNA/RES
 - Results in an UNABLE DUE TO AIRSPACE RESTRICTION uplink
 - UNA/TFC
 - Results in an UNABLE DUE TO TRAFFIC uplink

PID Request -STANDBY Sent


TI 6110.101, sec. 11.2.1.5

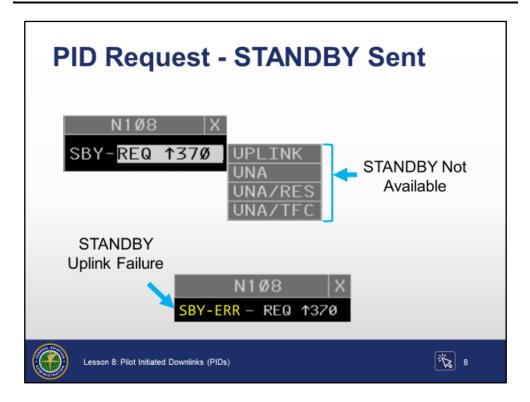

- If a STANDBY response has been sent to the aircraft, the next time the PID menu is opened the PID request will be preceded by SBY
 - STANDBY response option will not be available
- If for some reason the STANDBY uplink fails to reach the aircraft, the text SBY - ERR will be displayed in yellow text
- The same behavior applies to both route and altitude requests

PID Request -Uplink in Progress


TI 6110.101, Table 10-4

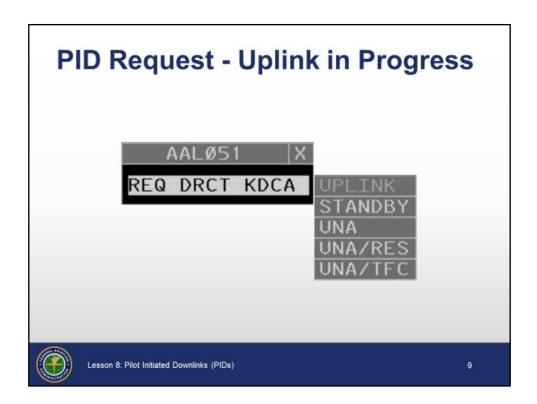

- If the PID menu is opened and an uplink of the same type as the PID request is in progress, the UPLINK response option will be grayed out
 - Selecting the grayed out UPLINK option will result in a cursor error response
- The same behavior applies to both route and altitude requests

PID Request -Special Conditions

TI 6110.101, sec. 11.4

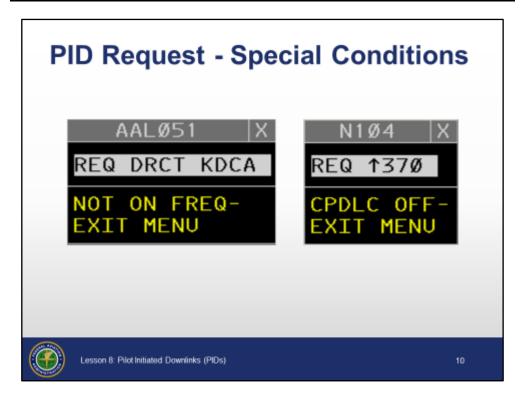

- When the PID menu is opened and there is a route or altitude request, the system will check for various conditions that prevent an uplink from being sent to the aircraft
- The conditions are:
 - Aircraft has not been marked on frequency
 - Unacknowledged Confirm Assigned Altitude (CAA) mismatch
 - Unacknowledged abnormal uplink
 - Unacknowledged emergency PID
 - Transfer of Communication (TOC) in Progress
 - Session terminated
 - · CPDLC is off

NOTE: An unacknowledged CAA mismatch and an unacknowledged abnormal uplink will be covered in a future lesson.

Continued on next page


PID Request -Special Conditions (Cont'd)

TI 6110.101, secs. 11.4 and 11.2.4.1

- If any of the conditions exist, the system will display error text at the bottom of the PID menu and no response options will be provided
 - · The only action that can be taken is to exit the menu
 - If the condition is resolved, reopen the menu and the normal response options will be available
- Another special condition is when the PID message includes Free Text elements that are not recognized by CPDLC
 - When a pilot downlinks a PID containing only free text:
 - CPDLC will automatically send an unable response to the pilot
 - The response to the pilot will also include the following message:
 - MESSAGE NOT DELIVERED. FREE TEXT/DUE TO REASON NOT SUPPORTED. CONTACT ATC OR RESEND REQUEST.
 - PID message is discarded
 - Message History view will not display discarded PID

PID Request - Altitude


TI 6110.101, sec. 11.2.1

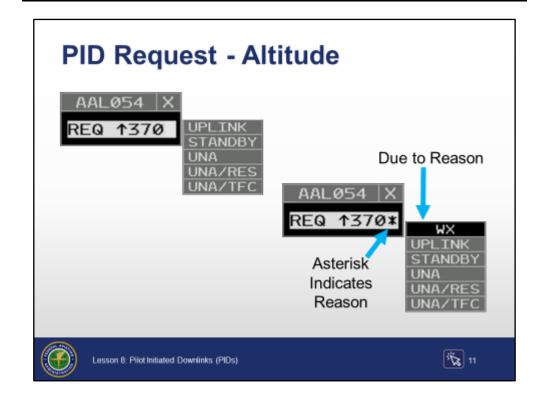

- For an altitude request, the possible response options are:
 - UPLINK
 - STANDBY
 - UNA
 - UNA/RES
 - UNA/TFC
- TBP or TBE on the desired option to select it
- An asterisk next to the request indicates that a pilot included a reason for the request
- The Due to Reason text will be displayed at the top of the PID response pop up
 - There are two possible reasons supported:
 - Due to Weather (WX)
 - Due to Aircraft Performance (ACFT PER)

PID Request - Voice Contact

TI 6110.101, sec. 11.2.1.3

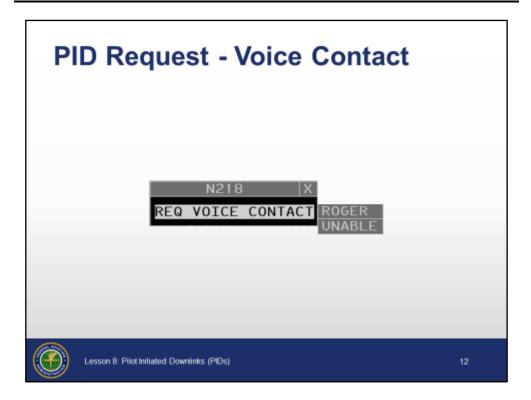


- For a Voice Contact request, the possible response options are:
 - ROGER
 - UNA
- TBP or TBE on the desired option to select it
- Voice Contact requests are not checked for the conditions that prevent an uplink
- Once the ROGER response is uplinked, the controller should uplink the appropriate frequency for voice communication
- The Uplink Frequency (UF) message can be used to uplink a frequency to the aircraft

NOTE: The UF message is covered in a later lesson.

Forwarding Open PIDs

TI 6110.101, sec. 11.2.2.1

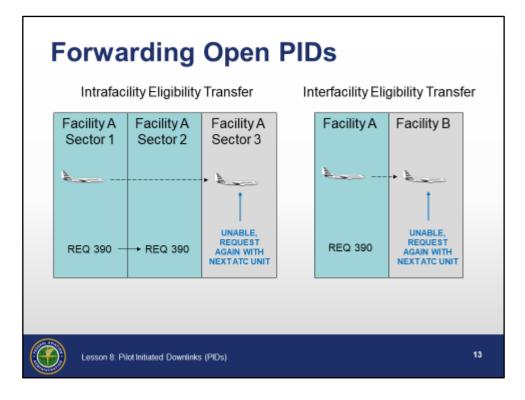


- A PID request will only be forwarded intrafacility and on the first transfer of eligibility
 - On the second transfer of eligibility or interfacility transfer of eligibility:
 - The system will automatically uplink:
 - UNABLE, REQUEST AGAIN WITH NEXT ATC UNIT message, and
 - The PID request will be closed by the system and removed from the PID menu

NOTE: The reason the PID request is only forwarded once is that the request may have become stale (e.g., the aircraft may have passed the requested fix).

NOTE: Track control and eligibility are independent of each other.


Responding to PIDs

TI 6110.101, sec. 11.2

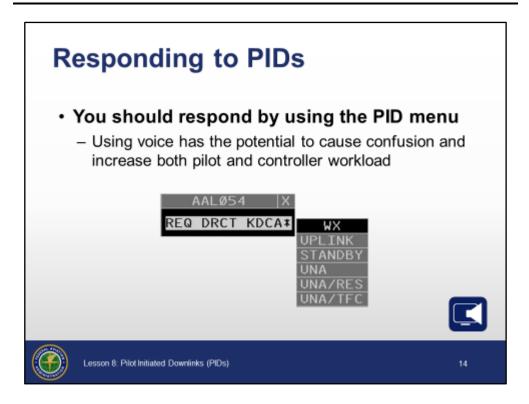


- PID requests should only be responded to by using the PID menu
 - Using voice or other CPDLC methods has the potential to cause confusion and increase both pilot and controller workload

Knowledge Check

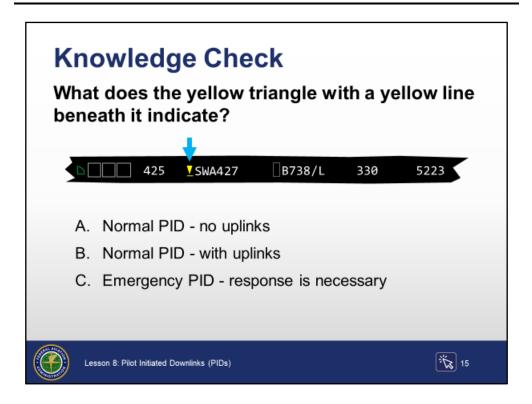


Question: What does the yellow triangle with a yellow line beneath it indicate?

Knowledge Check

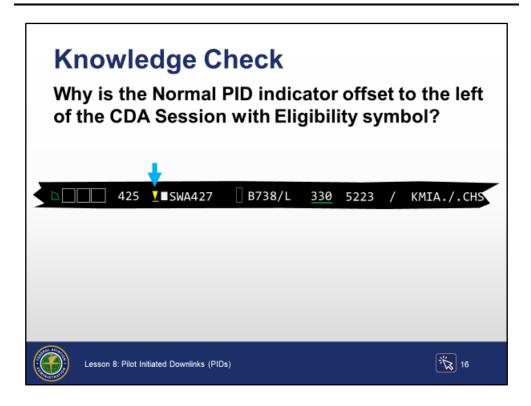


Question: Why is the Normal PID indicator offset to the left of the CDA Session with Eligibility symbol?

Knowledge Check

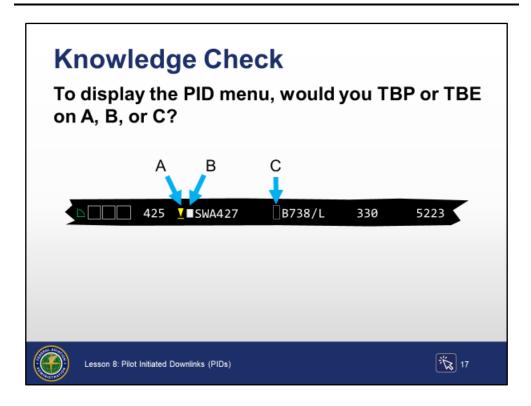

Question: To display the PID menu, would you TBP or TBE on A, B, or C?

Knowledge Check

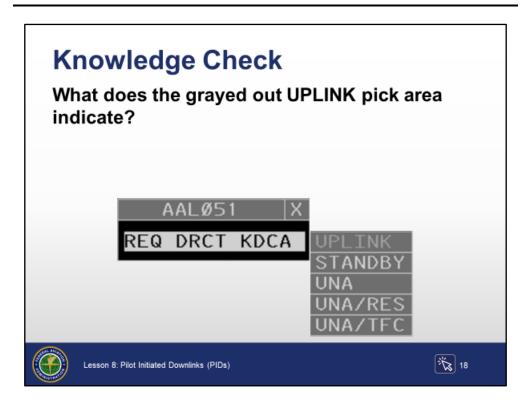

Question: What does the grayed out UPLINK pick area indicate?

Knowledge Check

Knowledge Check

You received a PID request at your sector. You then transferred communication to a sector at an adjacent facility.


Will the system forward that PID request to the next sector after eligibility is transferred to that sector?



Question: You received a PID request at your sector. You then transferred communication to a sector at an adjacent facility.

Will the system forward that PID request to the next sector after eligibility is transferred to that sector?

Knowledge Check

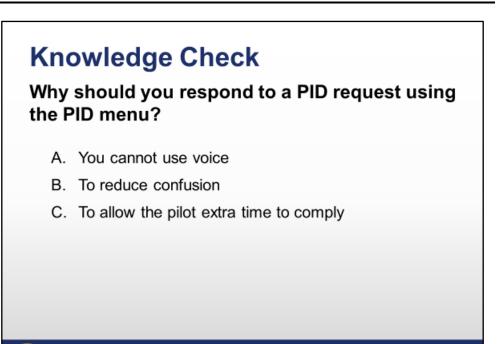


Question: Why should you respond to a PID request using the PID menu?

Lesson 8: Pilot Initiated Downlinks (PIDs)

20

PART-TASK EXERCISE: PILOT INITIATED DOWNLINKS

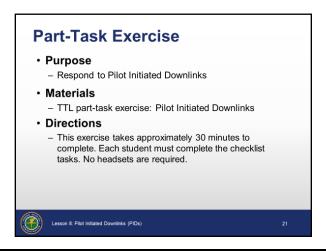

Purpose

Respond to Pilot Initiated Downlinks.

Materials



TTL part-task exercise: Pilot Initiated Downlinks



Directions

This exercise takes approximately 30 minutes to complete. Each student must complete the checklist tasks. No headsets are required.

CONCLUSION

Lesson Summary

Lesson Summary This lesson covered: CPDLC pilot initiated downlinks Normal PID Indicator - no uplinks Normal PID Indicator - with uplinks PID Menu PID requests Forwarding open PIDs Responding to PIDs

2

This Lesson covered:

- CPDLC pilot initiated downlinks
 - Normal PID Indicator no uplinks

Lesson 8: Pilot Initiated Downlinks (PIDs)

- Normal PID Indicator with uplinks
- PID menu
- PID Requests
 - Direct-to-Fix
 - Direct-to-Fix error
 - STANDBY sent
 - Uplink in progress

Continued on next page

CONCLUSION (CONT'D)

Lesson Summary (Cont'd)

- Special conditions
- Altitude
- Voice Contact
- Forwarding open PIDs
- Responding to PIDs